

Inboard Engine Troubleshooting

1. Confirm that the kill switch/pull is pushed in all the way.
2. Confirm the DC Main Switch is on (location of switch can be found in the manual in the nav table).
3. Confirm the battery selector switch is set to the start battery (start battery can be found in the manual in the nav table or on the [Member Resources Page](#)).
4. Confirm the shifter is in neutral.
5. Confirm there is an engine alarm sounding when the key is in the ignition.
 - a. If there's no alarm sound, ask the user to change the battery selector to "Both" or "All" (depending on the selector) and listen for the alarm.